

CROOZA[©]

ELECTRIC VEHICLE WITH MUSIC FUNCTION



DA-3321



Not recommended for children under 3 years!

This vehicle is not allowed to be used as a means of transportation and mustn't be operated in public streets.

WARNING: Never leave charging unattended!

The remote control mustn't be given to children, especially when they are sitting in the vehicle! Keep the remote control away from children.

Please read the manual carefully before the operation and retain it for future reference.

The vehicle must be operated only under adult supervision.

www.crooza.de

ELECTRIC SHOCK



WARNING

- Unfixed batteries may fall off the overturned vehicle and cause injuries. Ensure that the batteries have been fixed carefully.
- **FIRE PREVENTION**
 - The electric system of the vehicle is not allowed to be altered. Alterations may lead to fire, black-out of the electric systems and serious injuries.
 - Using wrong batteries and chargers may lead to fire, explosion and serious injuries.
 - Only adults are allowed to handle batteries. The batteries, which are quite heavy, are filled with electrolyte. Leaking batteries may lead to serious injuries.
 - Do not let your children to charge the batteries. Children may get injured by an electric shock. Only adults are allowed to charge the batteries and **the charging process must be supervised by an adult continuously. Never leave charging unattended!**
 - Please check the batteries, cable connections and the connector of the charger before charging the batteries. If you find any defects, do not charge them until they are repaired by an expert. The batteries mustn't be charged without a good fuse. **The vehicle must be off while being charged.**
 - Charging through contaminated socket can lead to short-circuit and other defects. Therefore, it must be refrained.
 - The charging process must be carried out safely, **FAR** from easily inflammable materials. Look out excessive smoke and heat generation.
 - The motors produce HEAT and spark! Be careful during the contact with the motors.
 - **The charger must be used only in a dry environment.**

SAFE DRIVING



WARNING

PREVENTING INJURIES

- The vehicle must be operated only under adult supervision!
- **Remote control must be used only by adults and kept away from children!**
- Never use the vehicle in darkness!
- **The vehicle mustn't be used as a means of transportation!** In order to prevent risks, it mustn't be operated in public streets, highways, rock pools, river beds etc. Ensure that there are no means of transport in the vicinity.
- **Operation only on flat and firm grounds/areas!**
- Operation only on safe grounds!
E.g: In areas
 - without swimming pools or ponds. Risk of drowning!
 - without inclination (excessive speed development, unexpected vehicle rolling) and slopes.
 - far from stairs, ramps, slopes, streets and boulevards.
- Operating Directives
Ensure that the following rules are followed for a safe operation:
 - Always sitting properly on the seat and fastening seatbelt.
 - No driving without shoes.



NOTICE

- Small items are included in the package at delivery status (Risk of swallowing). Assembling must be conducted under adult supervision.

1. Specifications

Age properly: 3-5 years old

Vehicle Size: 113x62x50

Weight: 9.5 kg

Temperature range: 0-40 °C

Load capacity: 30kg max.

Speed: 3-5 km/h

Motor: 6V Direct current


Charging time: When the batteries are charged more than 8-15 hours, the vehicle works for approx. 1-1.5 hours under normal load conditions. The batteries mustn't be charged longer than 16 hours once.

Charger: Input: AC220-240V (AC110V) / 50Hz
Output: DC6V / 800mA

Battery: 1 x Electrolyte battery (6V4.5Ah)

2. Features

- | | |
|---------------------------------|------------------|
| 1. Head lamp, Indicator | 6. Deflector |
| 2. Wiper | 7. Security belt |
| 3. Mirror | 8. Rear wheel |
| 4. Multifunction steering wheel | 9. Wheel trim |
| 5. Seat | 10. Front wheel |

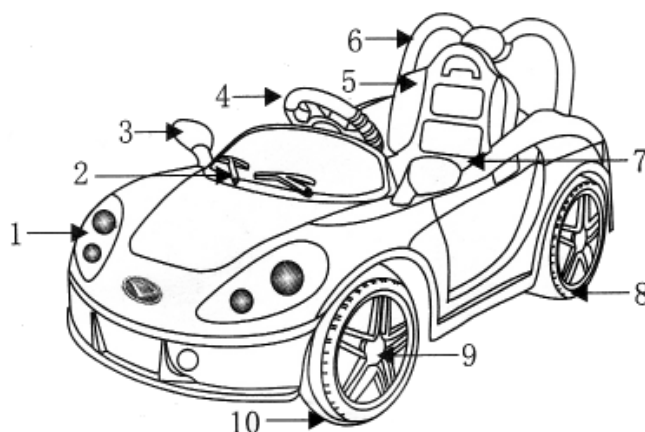


3. Assembly Instructions

1. Wheel trim

Place the wheel trim as shown and fix it by pressing.

Attach all of the wheel trims with the same method.

There are 4 wheel trims at delivery status.

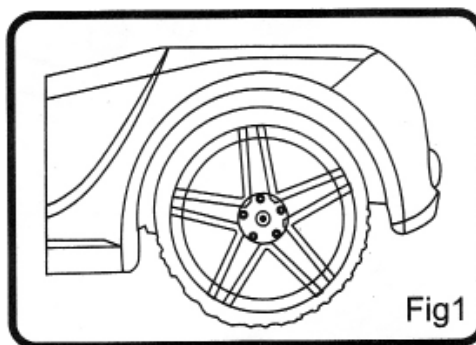


2. Mirror

Place the mirror as shown and attach it by pressing softly.

Attach both of the mirrors with the same method.


There are 2 mirrors at delivery status.

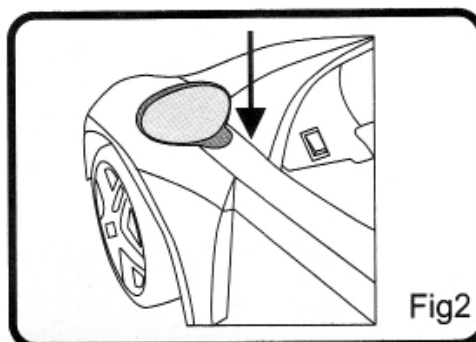

3. Seat


In order to attach the seat, turn the vehicle upside down and find the screw places. Put the seat as shown, position the angle with the inserted screw nut from below and fix it with the provided screws.

For a more detailed manual, visit our Website www.crooza.de

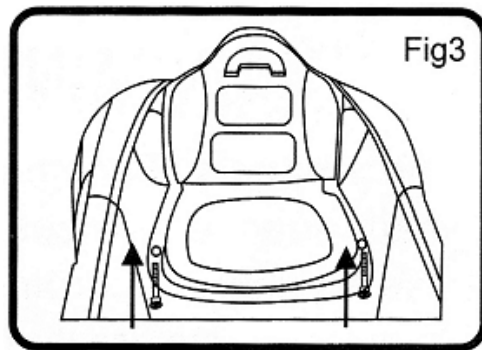


4. Deflector

Position the deflector as shown in Fig 4 and fix it by pressing softly.

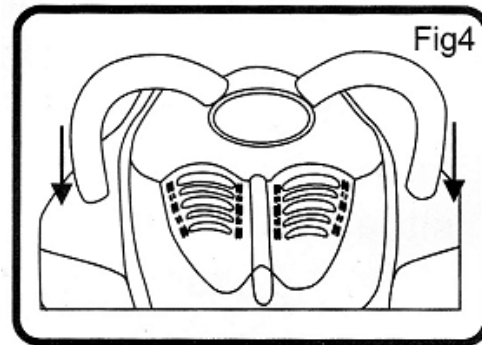

5. Steering wheel

Put the steering wheel on the steering bar, connect the jack of the steering wheel/vehicle and position the steering wheel so that the provided screws can be placed. Hold the screw nut against the screw on the other side and fix the screw without overwinding it.

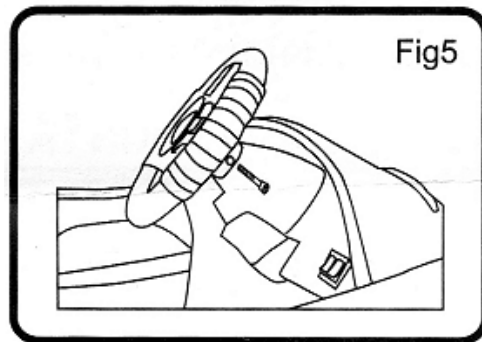

For a more detailed manual and pictures, visit www.crooza.de

4. Operating Mode

Connect the connector of the battery to supply power.

After connector attachment, the following functions must be regarded:

1. The switch on the right side of the dashboard is the Main Switch. On Pos. 'I', the vehicle is activated and the motor sound is heard. (Info: Charging is possible only when "0" is switched.)
2. When the pedal is pressed, the vehicle moves.
3. If the switch on the left side of the dashboard is on Pos. 'II', the vehicle moves backward when pedal is pressed.
4. In the middle position (Pos. "0"), the vehicle is off.
5. As soon as the left switch on the right side is turned to Pos. 'I', the front head lamps flash up.
6. When the right switch on the right side is on "I", the indicator is activated and different sounds like "turn right", "turn left", horn and music are heard. They can be selected via the buttons on the steering wheel. At the same time, the leds on the rear motor compartment blink according to the rhythm of the music.
7. The music setting can be connected with external sources like MP3-Players, Radios, CD-Players etc. In this case, the features of the steering wheel are deactivated.
8. The leds under the transparent motor compartment cover at the back flash up according to the rhythm of the music.
9. The seat can be arranged according to the size of your child by unpinning the screws.

SAFETY CHECK BEFORE OPERATION

There must be no rattling sounds like loose or broken parts. If you are unsure, please consult an experienced mechanic.

SAFETY INSTRUCTIONS



WARNING: Holding tightly during operation.



WARNING: Children under 3 years are not allowed to operate the vehicle because of the small parts which can be swallowed.



GENERAL WARNINGS

The operation of the vehicle can lead to dangerous situations. Electrically powered vehicles can move automatically, which may cause dangerous situations. Therefore, it's possible that the control of the vehicle may be lost during the operation, and this may lead to injuries or even death.

LIKE EVERY MOBILE PRODUCT, THE OPERATION OF THE VEHICLE CAN LEAD TO INJURIES OR DEATH EVEN IF ALL THE SAFETY RULES ARE OBEYED AND SAFETY EQUIPMENTS ARE APPLIED. THE OPERATION OF THE VEHICLE IS AT USER'S OWN RISK AND PURSUANT TO COMMON SENSE!

Please follow the local laws and regulations. The vehicle is not a means of transportation and is not allowed to be operated in public streets and on pavements. It is important that no skaters, bicyclists, other children, animals etc. cross the vehicle way. The rights of others using a specific area must be taken into account and respected.

The vehicle has been designed to be operated on straight, clean, dry and flat surfaces, and shows the best performance when the given conditions are fulfilled. The operation on uneven, rough and slippery surfaces can lead to the loss of traction control or undesirable high speeds (at inclinations) and consequently dangerous situations. High speeds like downhill driving must be refrained.

Functional measures such as wearing safety helmets, knee and elbow protectors are significant precautions to prevent injuries.

The vehicle mustn't be loaded with more than 40 kg.


No stunts or tricks must be performed with the vehicle. Improper uses like jumping, sliding etc. must be refrained.

Operations against the common sense or ignoring warnings can lead to injuries or even death.

OPERATION IS AT USER'S RISK. PARENTS ARE RESPONSIBLE FOR THEIR CHILDREN.

5. Charging the Batteries & Warnings

1. The charging socket is outside under the seat. Ensure that the power voltage complies with the features of the charger. Connect the charger to the socket and attach the other end to the charging jack of the vehicle. The charging indicator near the charging jack flashes up and the charging process begins. The vehicle must be off while being charged.
2. Maximum charging time is 16 hours.
3. During charging, both the battery and the charger get warm. That's normal and doesn't indicate a defect. **If there is excessive heat generation, charging must be stopped!**
4. Try to discharge the batteries completely before charging again (Deep discharge; that is, avoid discharging completely). Empty batteries must be charged 10-12 hours. Never charge the batteries longer than 16 hours once. Otherwise, the batteries can get damaged and their lifetime can get shorter.
5. In order to extend the lifetime of the battery, it must be charged at least once a month even if the vehicle won't be used in the meantime.
6. Charging must be conducted only by adults and supervised continuously. Do not allow your child to charge the vehicle.
7. **Never throw the battery into fire or water. Do not try to open the battery. If the battery leaks, avoid physical contact.**
8. Check the batteries and the charger against possible defects and abnormalities before every charging. Before beginning the charging process, ensure that all the parts related to charging are in correct places.
9. During the charging process, the main switch is in the middle position (OFF) and the vehicle is not operated.
10. Defected batteries or chargers must be replaced only by original ones. When needed, contact the manufacturer via info@kinder-elektro-auto.de
11. The charger is not a toy and must be kept away from children!
12. **WARNING:** For the safety of your child and to avoid injuries led by the gearbox of the vehicle, the direction mustn't be changed while driving (even on remote mode).

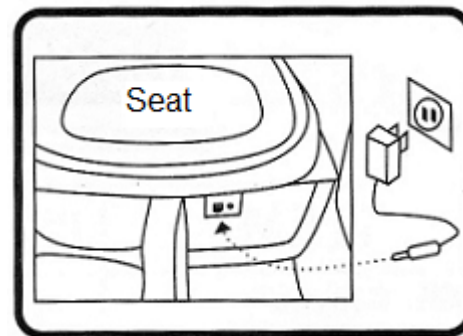

SAFETY INSTRUCTIONS

1. **Use the vehicle only on flat areas. If there are high inclinations in the way, the vehicle may tumble down!**
2. **The remote control mustn't be given to children! Keep the remote control away from children.**
3. The vehicle mustn't be used as a means of transportation! In order to prevent risks, it mustn't be operated in public streets, highways, rock pools, river beds etc.
4. **RISK OF CHOKING!** After unpacking, dispose the package immediately. The package is not a toy; children mustn't be allowed to play with it. **Keep the original box and the Transport Protector-Styrofoam for possible guarantee situations.**
5. Removable parts of the vehicle mustn't be swallowed or played with. Supervise your children while they are driving the vehicle.
6. The vehicle is for children under 30 kg. Do not overload the vehicle.
7. During the operation, do not touch the wheels or the wheel parts.
8. Electric cables and components mustn't be modified. Maintenance and reparation must be conducted by a professional expert.
9. Do not clean the vehicle with water. Use a soft wet cloth for cleaning.
10. If the vehicle won't be operated for a long time, the batteries must be taken off. Keep the batteries in a cool and dry place. Keep the batteries away from heat and fire. Charging batteries once 2 months regularly extends the battery life.
11. Recharging the batteries as soon as the speed decreases extends their life.
12. Avoid short-circuit of cable ends.
13. Do not use the vehicle in rainy weather or on a wet ground.
14. Use the specified fuses only.

Instructions for A Safe Operation

DANGER !



WARNING

PREVENTING INJURIES

- The vehicle must be operated only under adult supervision!
- Never use the vehicle in darkness!
- Operate the vehicle only on flat grounds!
- Operation only on safe grounds!

E.g: In areas

- without swimming pools or ponds. Risk of drowning!
- without slopes.
- far from stairs, ramps, slopes, streets and boulevards.
- Operating Directives
 - For a safe operation, ensure that these rules are learnt and followed by the children.
 - Always sitting properly on the seat.
 - Always tight holding
 - No driving without shoes.

Explain the instructions below to your child

Right after seeing the vehicle, your child will want to drive it immediately. Children are not capable of judging, realizing and assessing dangers. Unsupervised operations (like dismounting) can lead to serious injuries. Before letting your child drive the vehicle, you must check the area and your child's ability to judge and drive the vehicle safely. Even if children are instructed before, they are not capable of foreseeing the dangers and turning away from them. There are no other directly supervision options for adults. Set up safety rules adapted to local conditions alongside the instructions below about using the vehicle. Ensure that these instructions are followed. All of these rules must be obeyed by the children who will play with your child as well.

Instructions for a safe operation:

Ensure that children learn and obey the rules below:

1. Always sitting properly on the seat.
2. No driving without sturdy shoes.
3. Only one (1) child must drive the vehicle. If children sit improperly or stand in the vehicle, they may fall off; the vehicle may overturn and this may lead to serious injuries.
4. Do not allow your child to drive the vehicle in the streets or roads where motored vehicles are driven.
5. Do not allow your child to drive the vehicle near swimming pools, ponds, barriers (e.g: furniture, trees with low branches etc.) or overhanging building parts (e.g: stairs, wall projections etc.).
6. Never use the vehicle in darkness!
 - An unexpected barrier may cause an accident.
 - Driving only in daylight or well-lit areas.
7. Forbid driving in sloped areas.
8. Do not allow your child to drive down the stairs.
 - Even if the pedal isn't stepped, it may reach a high and dangerous speed.
 - The vehicle may overturn.
 - The motor may stop suddenly and the vehicle may roll down the stairs together with the child.
9. Moving things must be kept away. Revolving things like motor, gearbox and wheels can jam the fingers, hair etc. and lead to serious injuries. Do not allow your child to operate the vehicle in lateral or over-head position.
10. Do not use any easily inflammable materials near the vehicle. The vehicle has electric switches which spark (like all the switches) when triggered. Easily inflammable liquids can catch fire.
11. Take the batteries off to prevent an unsupervised operation.

IMPORTANT!

For the safety of your child and to avoid injuries led by the gearbox of the vehicle, teach your child not to change direction while driving.

- Practise on steering with your child and show him/her by which speed the steering wheel must/can be turned.



- As soon as the pedal is unstepped, the vehicle stops automatically.
- Ensure that your child knows how to steer and to stop the vehicle.
- **The stop-function may not work in sloped areas. Ensure that the vehicle is used only on flat grounds.**

ATTENTION!

The vehicle must be operated **ONLY** outdoors.

A big part of floor coverings, which have been misplaced, can be damaged by the vehicle.

The manufacturer and the importer are not responsible for the damages occurring on floor coverings or other building parts.

Package Content

1. Main body	1	7. Seat	1
2. Steering wheel	1	8. Fuse	1
3. Motor	1	9. Charger	1
4. Battery	1	10. Remote control	1
5. Wheels	4	11. Operation manual	1
6. Wheel trim caps	4		

WARNING!

The vehicle has small parts which can be swallowed by children.

Warning: At delivery status, the positive pole (red cable) of the battery is not attached for safety reasons. Please attach the red cable after the whole assembly and put it under the seat carefully.

Maintenance Instructions

Check if all the screws, nuts and caps are set correctly and firmly. Ensure that none of the plastic parts are damaged and broken.

In snowy or rainy weather, keep the vehicle in a dry room which has a ceiling. Even if the vehicle won't be used, charge the batteries at least once a month.

A dirty vehicle can be cleaned with a soft wet cloth. Avoid any contact of water with the electric system, batteries and the switches of the vehicle.

Contact of water with motor and electric components can lead to corrosion and damage on the motor and the electric components.

Do not use the vehicle on the sand. Sand in the motor, gearbox or electric components causes blockades and blackouts of the related parts.

The vehicle can be cleaned with a dry cloth. In order to restore the original gleam of the vehicle, you can work on the plastic parts of the vehicle with a wax free furniture polish. **NEVER** use a car polish.

For a safe operation, it is recommended that the cabling is checked regularly against short-circuits.

Troubleshooting

Problem	Possible Cause	Solution
No sound, no light, the vehicle doesn't move	<ol style="list-style-type: none"> 1. Cable connections are loose. 2. Check the fuse. 3. Main switch is not on Pos. "I". 	<p>Check the cable connections. Ensure that the batteries are in their place under the steering wheel. Change the fuse. Turn the main switch to Pos. "I".</p>
Although the motor works, the vehicle doesn't move	<ol style="list-style-type: none"> 1. Check if the rear wheels turn as well. 2. Loose motor connection 3. Defected gearbox 	<p>Ensure that the rear wheels touch the ground. Remove the gearbox and tighten the screws. Change the gearbox.</p>
Motor doesn't work	<ol style="list-style-type: none"> 1. Loose cable 2. Fuse 3. No contact with the gas pedal. 	<p>Check if the cable connections are correct. Change the fuse. Change the foot switch</p>
Forward motion is OK, backward motion doesn't function or backward motion is OK, forward motion doesn't function	<ol style="list-style-type: none"> 1. Check the Forward/Backward switch with a circuit analyzer 	<p>Check if the cable connected to the switch is placed correctly. Change the Forward/Backward switch.</p>
Speed is very low	<ol style="list-style-type: none"> 1. Check if the batteries supply more or less than 6V. 2. Connect the motor (together with the gearbox) directly with the battery and check if the speed increases. 3. Remove the gearbox and check if it is in a good situation. 	<p>Charge the batteries again. The reason for speed loss might be the condition of the ground on which the vehicle is operated. Change the motor and gearbox.</p>
Batteries cannot be charged	<ol style="list-style-type: none"> 1. Check if the output voltage of the charger is 6V. 2. Plug the charger, remove the connector from both sides of the battery and check the battery directly if $6 \pm 0.1V$ is supplied. 3. Check the connector of the charger and the soldering point. 	<p>Change the charger. Change the batteries. Ensure that the charger is connected correctly. Check the fuse.</p>
Remote control doesn't work	<ol style="list-style-type: none"> 1. Check if the vehicle is on. 2. Turn the switch to "ON" to control remotely. 3. Ensure that the Control-Display of the remote control flashes up. 	<p>Check the places of 0-I switch on the vehicle. Check the batteries of the remote control. Check the fuse. Change the control unit.</p>

Original replacement parts can be found on Online-Shop on www.crooza.de

Instructions Related to the Maintenance and Disposal of the Batteries

MAINTENANCE

If a battery is leaky, remove the battery which has acid escaping by avoiding skin contact and put the battery in a plastic bag. Please check the description on the right side to learn how the battery can be disposed in the right way.

In the event of skin or eye contact, rinse the affected part in running water for at least 15 minutes and see a doctor.

When acid is swallowed, water, milk etc. must be drunk or egg white eaten immediately. Never try to throw up. Call the doctor instantly.

Before the first operation, the batteries must be charged for at least 12 hours once. Never charge the batteries longer than 16 hours once.

Overloading and excessive discharge shorten the battery life and operating period substantially.

Before every operation, the batteries must be charged 8-12 hours.

The batteries must stand vertical while being charged. Avoid discharging the batteries completely before charging them again.

Charge the batteries for a long time before putting the vehicle away.

Even if the vehicle won't be used, charge the batteries at least once a month.

Batteries left empty will definitely stop working later.

LOSS OF THE GUARANTEE!

Never leave leaking batteries in the vehicle. Leaking liquid can damage the vehicle.

Do not keep the batteries on the surfaces like the countertops in kitchens; they may get damaged. Take precautions to protect the contact surface before you put the batteries down.

Do not keep the batteries in a place where the temperature is above 24 °C and below -23°C.

Only use 6V batteries.

Ensure that the batteries are not loose in the vehicle.

Always use a battery fastener to lock the batteries.

Check the batteries and the charger against imperfections and defects before every charging. If you detect a defect, do not charge the batteries until the defected part is repaired.

DISPOSAL

The provided battery is overflow-protected and welded. It must be ecologically disposed and recycled.

Do not throw the battery into fire. It may leak or explode.

Do not dispose the batteries together with normal domestic waste. **Disposing the batteries with normal domestic waste is prohibited by law!**

Protect the environment by not disposing the batteries with normal domestic waste (2202/96/EC). Get information about recycling and disposing options from the local administration in your vicinity.




**Batteries separately disposed
(not with domestic waste!)
Do not throw the battery into fire!
Don't open!**

The symbol „crossed-out waste container“ on the product and in the manual indicates that electric and electronic devices must be collected and disposed separately from normal domestic waste.

There are various collection systems about recovery and recycling available in the EU.

For more information, please consult your local authorities or your dealer.

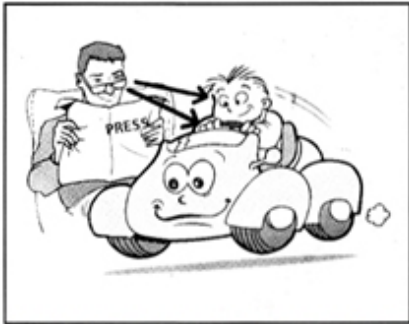


IMPORTANT!!! OPERATION ONLY UNDER ADULT SUPERVISION!



BRAKING ON TIME TO PREVENT INJURIES.




CHECK THE ELECTRIC SYSTEM, CABLE CONNECTIONS AND BATTERIES REGULARLY. IF YOU DETECT A DEFECT, DO NOT USE IT UNTIL IT IS REPAIRED BY A REPAIRMAN.

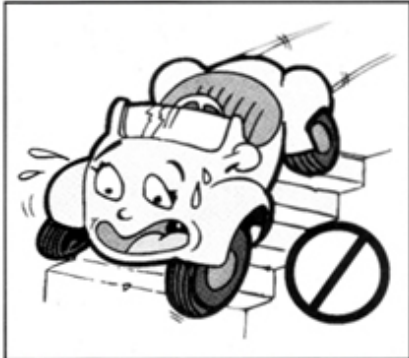

NO DRIVING IN DANGEROUS PLACES SUCH AS PUBLIC STREETS, STAIRS, SWIMMING POOLS, PONDS ETC.




NO DRIVING WITHOUT STURDY SHOES.

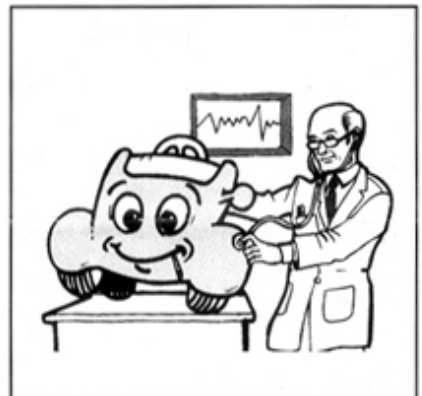

CHECK THE ELECTRIC SYSTEM, CABLE CONNECTIONS AND BATTERIES REGULARLY. IF YOU DETECT A DEFECT, DO NOT USE IT UNTIL IT IS REPAIRED BY A REPAIRMAN.



BEFORE OPERATING, ENSURE THAT THERE ARE NO PEOPLE, PETS OR OBJECTS IN THE WAY.

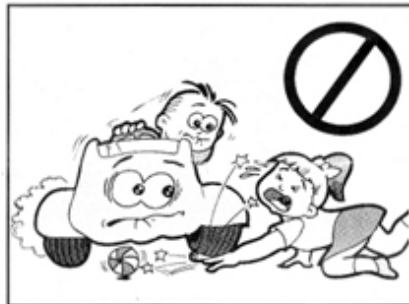

DO NOT BRING BODY PARTS, DRESSES OR OTHER OBJECTS NEAR THE MOVING VEHICLE AND THE WHEELS.



THE CHARGER IS NOT A TOY AND MUST BE KEPT AWAY FROM CHILDREN! FIND A PLACE THAT CHILDREN CANNOT REACH AND DO NOT LET YOUR CHILDREN CHARGE THE VEHICLE.



ALWAYS FOLLOW THE DIRECTION.



THE VEHICLE, CABLE CONNECTIONS, MOTOR AND BATTERIES MUST BE KEPT AWAY FROM WATER. DO NOT WASH THE VEHICLE WITH A WATER HOSE.




CLEAN THE VEHICLE WITH A WET CLOTH. ONLY ADULTS MUST CLEAN THE VEHICLE.



CHECK THE CHARGER AND DO NOT PLAY WITH IT. IF YOU DETECT A DEFECT, REPLACE IT. ONLY USE THE CHARGER THAT DUBAX-MARKETING PROVIDES.




IF THE VEHICLE WON'T BE OPERATED FOR A LONG TIME, CHARGE THE BATTERIES AND DISCONNECT THE BATTERY PLUG FROM THE VEHICLE. THEN, THE BATTERIES MUST BE CHARGED ONCE TWO MONTHS AT THE LATEST, IF YOU WON'T USE IT IN THE MEANTIME.

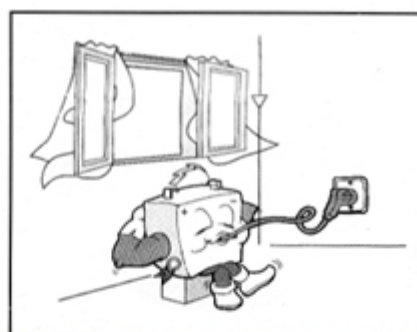


DURING THE CHARGING PROCESS, EXPLOSIVE GASES MAY COME INTO EXISTENCE. CHARGE THE BATTERIES ONLY IN A WELL AIR CONDITIONED ROOM AND KEEP THEM AWAY FROM INFLAMMABLE MATERIALS.



WARNING: CHARGE THE BATTERIES BEFORE THE FIRST OPERATION. DO NOT ALLOW CHILDREN TO TOUCH THE BATTERIES AND THE CHARGER. CHARGING MUST BE CONDUCTED BY ADULTS.

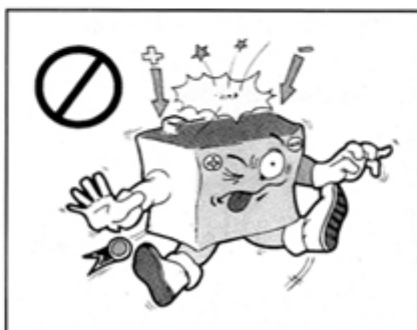


PAY ATTENTION TO THE RIGHT POLARITY(+/-) OF THE BATTERY.

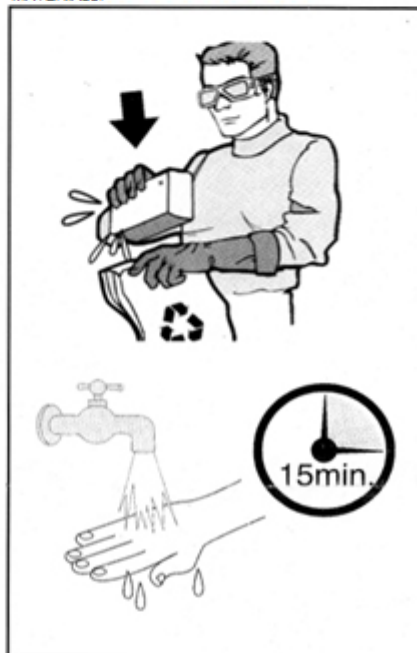

IF THE BATTERY LEAKS, AVOID SKIN AND EYE CONTACT WITH THE LIQUID OF THE BATTERY AND PUT THE BATTERY IN A PLASTIC BAG. PLEASE READ THE INSTRUCTIONS IN THE OPERATION MANUAL IN ORDER TO LEARN HOW TO DISPOSE THE BATTERY.




ONLY USE THE BATTERIES THAT DUBAX-MARKETING PROVIDES.

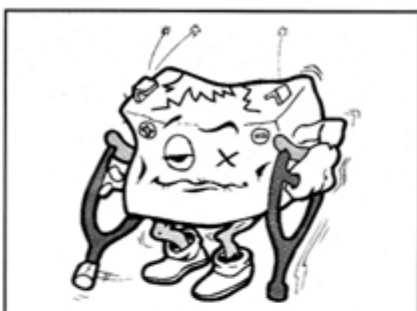

CHECK THE BATTERIES REGULARLY. DO NOT EXPOSE THEM TO PRESSURE. IF YOU DETECT A DEFECT, REPLACE THEM IMMEDIATELY.

IF THERE IS A CONTACT (SKIN OR CLOTHES) WITH THE LIQUID OF THE BATTERY, PUT THE RELATED PLACE UNDER WATER FOR AT LEAST 15 MINUTES AND CONTACT THE DOCTOR.

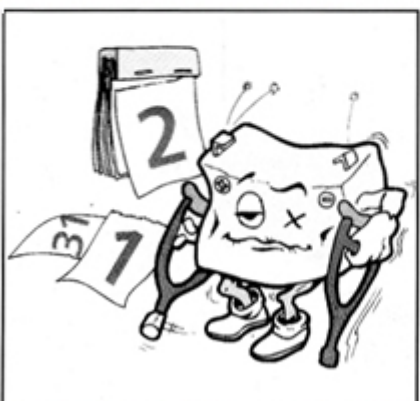

CHARGE THE LOW BATTERIES AGAIN. IN ORDER TO PREVENT DEFECTS ON THE BATTERIES, NEVER DISCHARGE THEM COMPLETELY.




NEVER OPEN THE BATTERIES. THEY INCLUDE LEAD AND CORROSIVE ACID. WHEN THERE IS A SKIN CONTACT OR SWALLOW, THEY MAY LEAD TO CORROSION AND SERIOUS INJURIES.

IF THE LIQUID OF THE BATTERY IS SWALLOWED, DRINK A LOT OF WATER, OR MILK OR EAT EGG WHITE. DO NOT TRY TO THROW UP AND LOOK FOR A DOCTOR IMMEDIATELY.

IMPORTANT!

1. All the illustrations serve the visualization and specification of the product. If you notice differences between the illustration and the product, follow the construction of the product.
2. Technical modifications in whole or in part to increase the product quality are expressly reserved without prior notice.

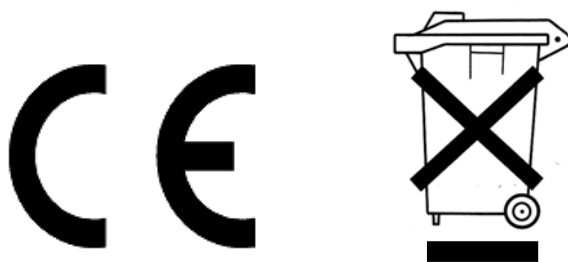

dubax-marketing oHG

WEEE-Reg.-Nr.: DE 33541416

64295 Darmstadt / Germany

info@dubax-marketing.de

Model: DA-3321

crooza[®] is a registered brand of dubax-marketing oHG

All rights reserved.

Copying and Distributing - even in parts - only with written consent of Dubax-Marketing oHG Darmstadt.